

I/O connectors AudioCube and Cube-I/O

Cube-I/O-8:

Front:	4 AES/EBU in	XLR f
	4 AES/EBU out	XLR m
Rear:	9-Pin (RS422 out)	Sub D 9 f
	CubeCom (RS232 in)	Sub D 9 f
	Audio-connection to Cube	Sub-D 25 f
	Sync-connection to Cube	Sub-D 15 m
	CVS in/out	BNC
	LTC in symm.	XLR f
	LTC out symm.	XLR m

Cube-I/O-16:

Front:	8 AES/EBU in	XLR f
	8 AES/EBU out	XLR m
Rear:	2 Audio-connection to Cube	Sub-D 25 f

AudioCube 5:

Front:	CD-Rom
	CD-Burner
	Shuttle-Hard drive
	Floppy Drive
	Power switch
	Reset button

Rear: Please Refer To "AudioCube5 Front and Rear Photo's"